


Drawing with Co-ordinates

You can draw using the mouse or by entering co-ordinates directly from the keyboard, As already stated CADVANCE supports several co-ordinate systems ABS, REL, POL and PAB.

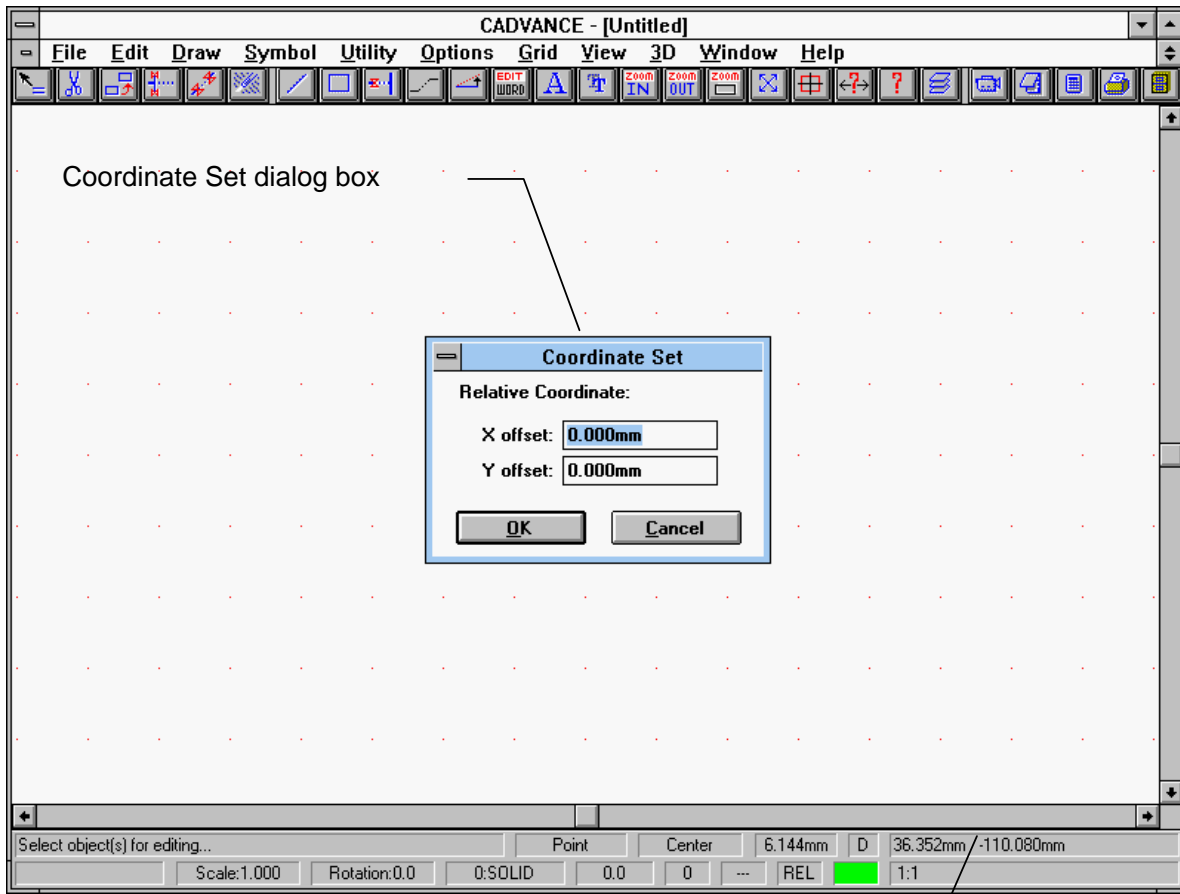

Click in the Cursor Coordinate box the get the Coordinate Dialog Box on the screen

1. Set the required co-ordinate mode ([]) ABS, REL, POL or PAB
2. Choose a Draw Command
3. Select the Cursor Coordinate Box
Shortcut key =]
The Coordinate Set dialog box appears, Enter the first Value
4. Use the [TAB] key to highlight the second field and enter a value if required.
5. Click [OK]